


# NON-FREEZE GROUND HYDRANT

## BOX TYPE HYDRANT WITH HEAVY DUTY COVER

**FUNCTION:** Hydrant with heavy duty hinged cover, box, particularly suitable for traffic areas which require a flush with ground non-freeze hydrant. Ideal for parking decks, outside exhibition areas, etc. The closing valve is located below the frost line. When hydrant is shut off water is drained from the casing through the drain hole in the valve housing.

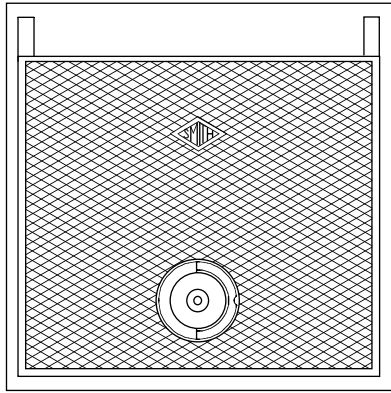

**TOP VIEW**

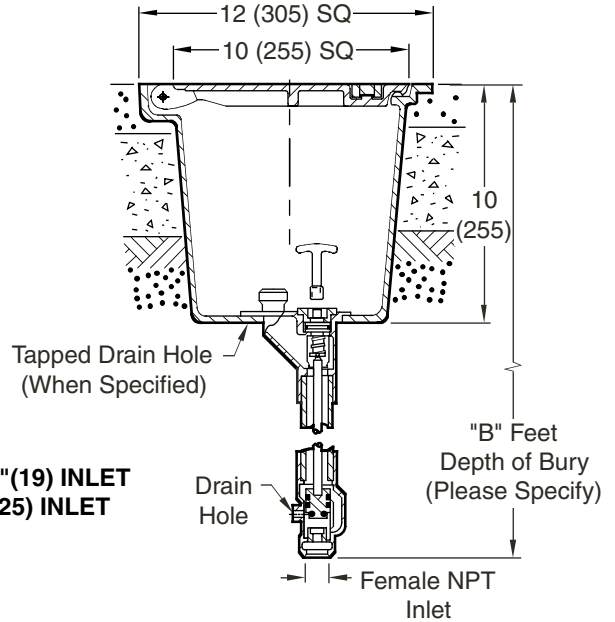


Fig. 5950 ... 3/4"(19) INLET  
 Fig. 5951 ... 1"(25) INLET

B(Depth of Bury) = 02(610), 03(915), 04(1220), 05(1525),  
06(1830), 07(2135) or 08(2438) Feet

- NOTE:**
1. Addition of vacuum breaker will not allow draining of the casing. Smith is not responsible for any casings that burst or related incidents if the hydrant is supplied with a vacuum breaker.
  2. All Jay R. Smith hydrants are manufactured with "NO-LEAD" brazing rings and USDA approved lubricants.
  3. The AB1953, California Lead Law, and NSF/ANSI Standard 61-2008 - Drinking Water System Components are not applicable to Jay R. Smith hydrants as they do not convey/dispense water for human consumption through drinking or cooking.
  4. Dimensions shown in parentheses are in millimeters.

**REGULARLY FURNISHED:**

Bronze Hydrant with Bronze Casing.  
"T" Handle Key and Cast Iron Box with Heavy Duty Cover with Lifting Device.

**VARIATIONS:**

- 1"(25) Hose Connection Adaptor -HC1
- 1/8"(3) NPT Drain Hole in Box -N
- 1/8"(3) NPT Drain Hole in Valve Housing -NV
- "Water" Cast on Cover -W

**OPTIONAL MATERIALS:**

- Nickel Bronze Top -NB
- Polished Bronze Top -PB
- Rough Bronze Top -RB

### TECHNICAL DATA

Non-Freeze Ground Hydrants are supplied with a special valve housing which prevents freezing of hydrant during non-use periods. The valve housing must be installed below the frost line which prevails for the area of installation. The valve housing has a drain hole which drains the casing during non-use periods. Since water from the drain hole is normally allowed to drain into the ground, the valve housing should be set in a bed of gravel. Water drained from the casing can then seep into the ground.

Some locations which require Non-Freeze Ground Hydrants cannot tolerate water draining from the drain hole. Examples are parking garages, plazas and roof decks used for recreational purposes. Often in these types of applications the valve housing will protrude into a finished area which is not subject to freezing temperatures. To eliminate the problem of water drainage in this type of installation, Smith can supply a tapped drain hole in the hydrant box and a tapped drain hole in the valve housing. Through these tapped drain holes, water accumulation in the box and the water from the valve housing drain hole can be piped to a suitable drain.

**5950, 5951**

FIGURE NUMBER	M L K J	6-13-11 5-23-11 10-7-09 4-18-97	Revised Note Added Note Revised Notes Added Note	TBW TBW RN EMB	CL CL CL BS	WEIGHT POUNDS	VOLUME CUBIC FEET	<b>FIGURE NUMBER</b>  <b>5950, 5951</b>
REV.	DATE	DESCRIPTION		BY	CKD. BY			

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

DRAWING NUMBER  
**S5950**

SIZE  
**A**

SCALE:  
**NONE**

DATE:  
**12-8-86**

APPROVED BY:  
**TD**

CHECKED BY:  
**VGD**

DRAWN BY:  
**WAS**



**JAY R. SMITH MFG. CO.**  
 MEMBER OF ACORN'S FAMILY OF COMPANIES  
 POST OFFICE BOX 3237  
 MONTGOMERY, ALABAMA 36109-0237 (USA)  
 TEL: 334-272-8520 FAX: 334-272-7396 www.jrsmith.com



MEMBER OF:

LOCATION

# PARTS LIST WITH MAINTENANCE INSTRUCTIONS

DRAWING NUMBER  
S9950BS

SIZE  
A

SCALE:  
NONE

DATE:  
1-23-85

APPROVED BY:  
TD



CHECKED BY:  
TD

DRAWN BY:  
VGD

FIGURE NUMBER  
5950, 5951-BS

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE

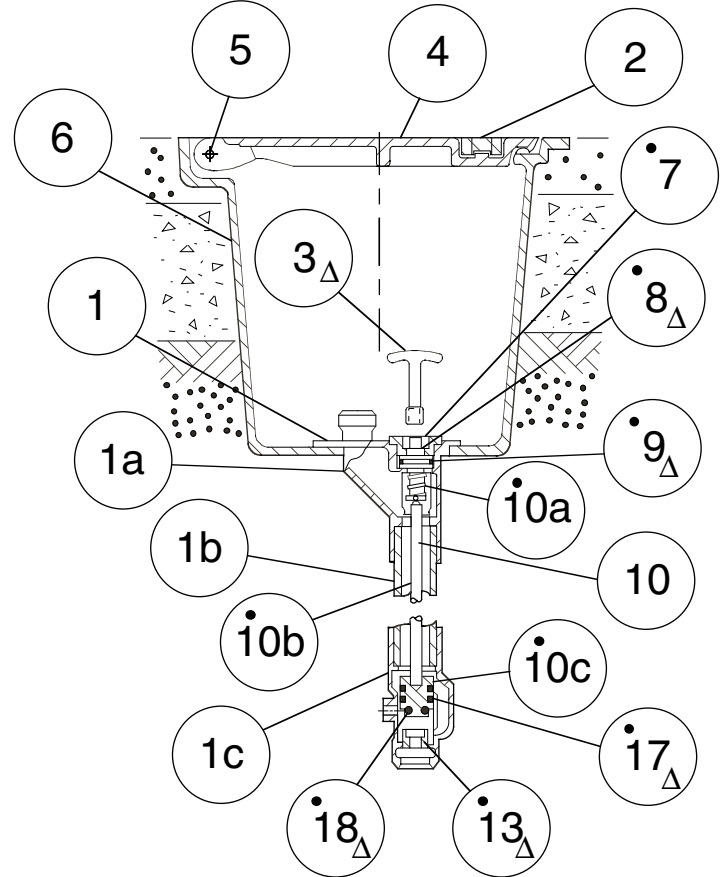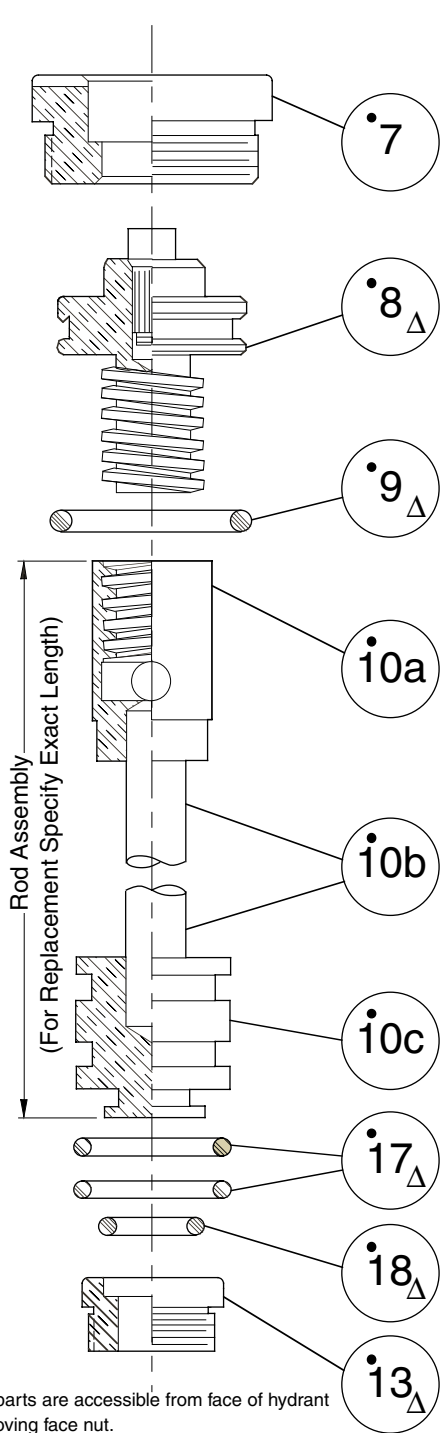

REPLACEMENT PARTS LIST-SPECIFY FIGURE NO. WHEN ORDERING			
No.	DESCRIPTION	No.	DESCRIPTION
1	Head/Casing Assembly	8	Operating Screw
1a	Head	9	Operating Screw "O" Ring
1b	Casey	10	Operating Rod Assembly
1c	Valve Housing	10a	Coupling
2	Lifting Device	10b	Rod
3	Key	10c	Plunger
4	Cover	13	Removable Seat
5	Hydrant Cover Hinge Pins(2)	17	Plunger "O" Ring
6	Box	18	Plunger "O" Ring
7	Face Nut		

### MAINTENANCE INSTRUCTIONS

1. Shut off water supply.
2. Remove face nut.
3. Pull stem out for complete access to all working parts.
4. Check all working parts for replacement.
5. Replace complete stem assembly and face nut.

• These parts are accessible from face of hydrant by removing face nut.  
 △ These replacement parts available in HPRK-41.

WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER	
		<b>5950, 5951-BS</b>	
A	7-23-91	Redrawn & Added Item 2	EMB JCS
REV.	DATE	DESCRIPTION	BY CKD. BY