

B



JAY R. SMITH MFG. CO.
 DIVISION OF SMITH INDUSTRIES, INC.
 POST OFFICE BOX 3237
 MONTGOMERY, ALABAMA 36109-0237 (USA)
 TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com




MEMBER OF:



LOCATION

8000-GTX INTERCEPTOR SERIES ASSEMBLY INSTRUCTIONS

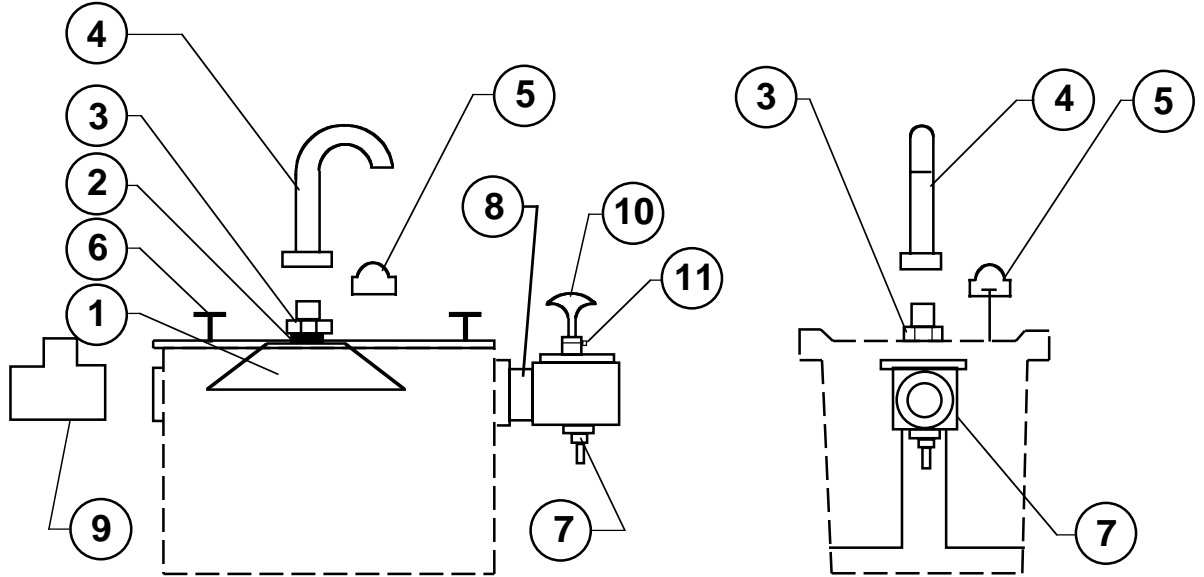

- ① Cone ② Cone Gasket ③ Nut ④ Flexible Hose ⑤ Cone Cap and Chain
 ⑥ "T" Handle ⑦ Line Shut Off Valve ⑧ Nipple ⑨ Flow Control Fitting
 ⑩ Line Shut Off Valve Handle ⑪ Set Pin For Valve Handle

- A. Remove parts from interior of interceptor.
- B. Remove plastic cap from center hole in cover. Place cone gasket (Item 2) between cone (Item 1) and bottom of cover. Insert cone (Item 1) from the bottom of cover thru center hole. Secure cone (Item 1) to cover with nut (Item 3).
- C. Return cover to correct position and tighten bolts.
- D. Attach flexible hose (Item 3) on to the portion of the cone (Item 1) projecting above cover.
- E. Attach cone cap and chain (Item 5) to cover by threading bolt into hole, attaching and securing "S" hook to bolt and chain.
- F. Install line shut off valve (Item 7) and nipple (Item 8) at outlet side of interceptor. Install valve handle (Item 10) and secure with set pin (Item 11).
- G. Install two "T" handles (Item 6) in threaded holes provided in cover at each end.

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE

DRAWING NUMBER
PM 2723SIZE
ASCALE:
NONEDATE:
2-13-84APPROVED BY:
JMCDCHECKED BY:
SJMDRAWN BY:
PJ

PM 2723

FIGURE
NUMBER

REV.	DATE	DESCRIPTION	BY	CKD. BY
B	7-13-99	Updated Drawing	TBW	
A	1-18-95	Updated	CMB	

WEIGHT
POUNDSVOLUME
CUBIC FEET

FIGURE NUMBER

PM 2723