



9812 SERIES VERTICAL OUTLET ASSEMBLY DETAIL

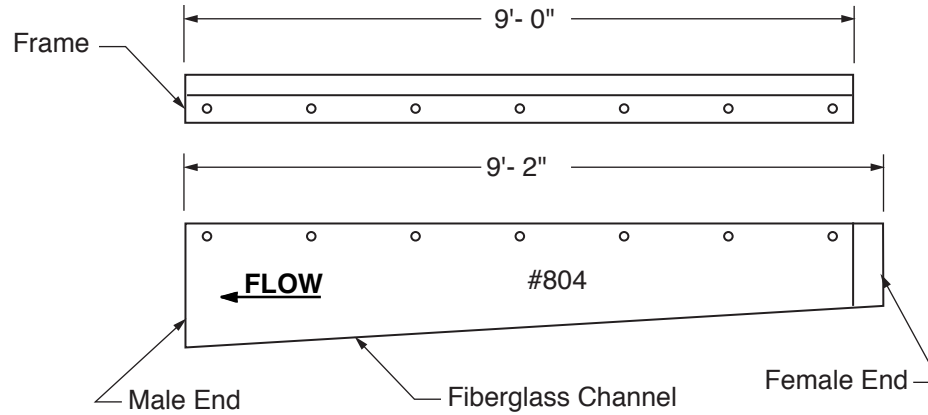


1

Assemble Frame Flush with Male End of Channel Align holes in Frame and Channel and insert Ratchet Fasteners to Secure Frame to Channel.

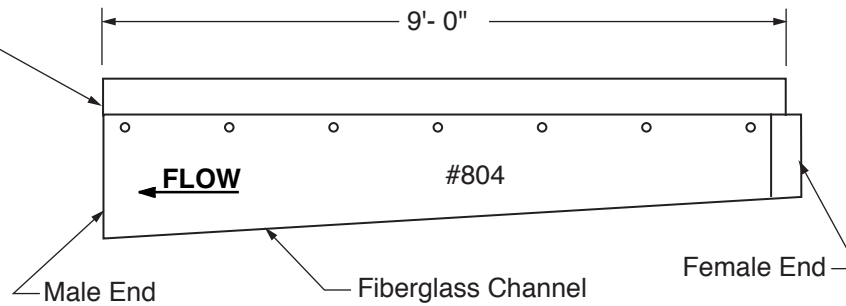

2

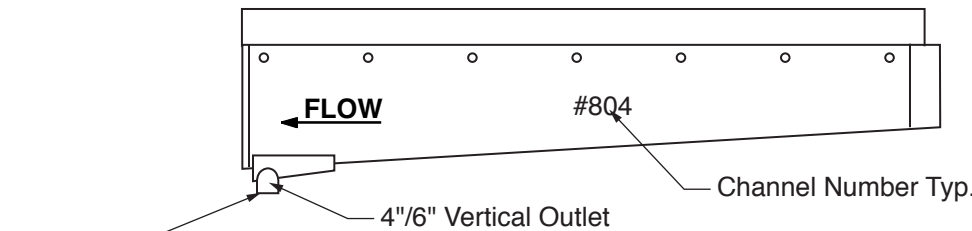

3

Sand all mating surfaces thoroughly to remove mold release wax. Use Fiberglass repair kit to bond deep End Cap to Channels. Allow to dry. Place Vertical Outlet in desired position (cut to length if necessary) and draw line around inside of outlet on bottom of channel. Cut out hole and align vertical outlet over hole. Use a Fiberglass repair kit to attach outlet. Allow to dry before installing channel.

PROFILE VIEW SHOWN
NO SCALE