



9812 SERIES OUTLET END CAP ASSEMBLY DETAIL

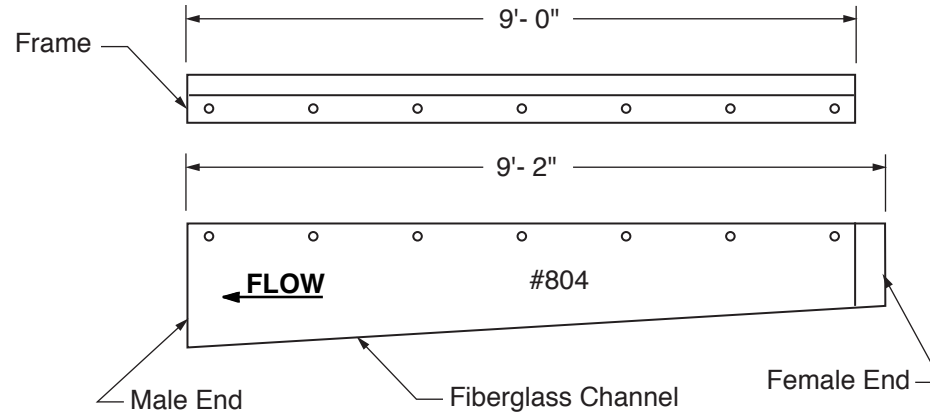


1

Assemble Frame Flush with Male End of Channel Align holes in Frame and Channel and insert Ratchet Fasteners to Secure Frame to Channel.

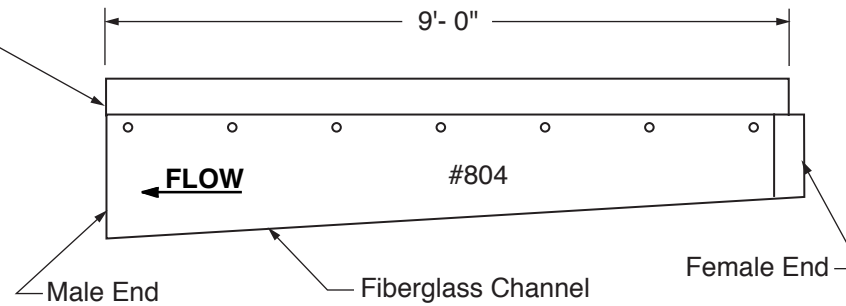

2

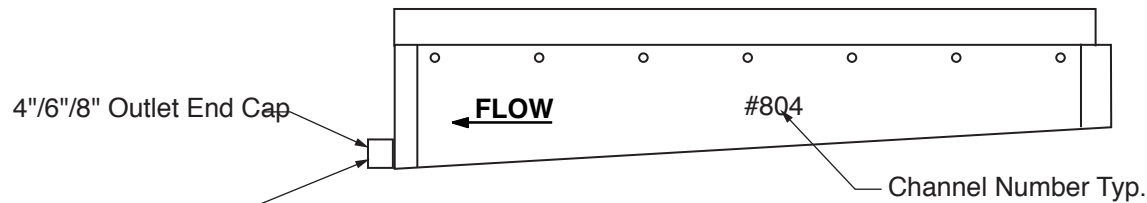

3

Sand all mating surfaces thoroughly to remove mold release wax. Use Fiberglass repair kit to bond Outlet End Cap to Channels. Allow to dry before installing channel.

PROFILE VIEW SHOWN
NO SCALE