
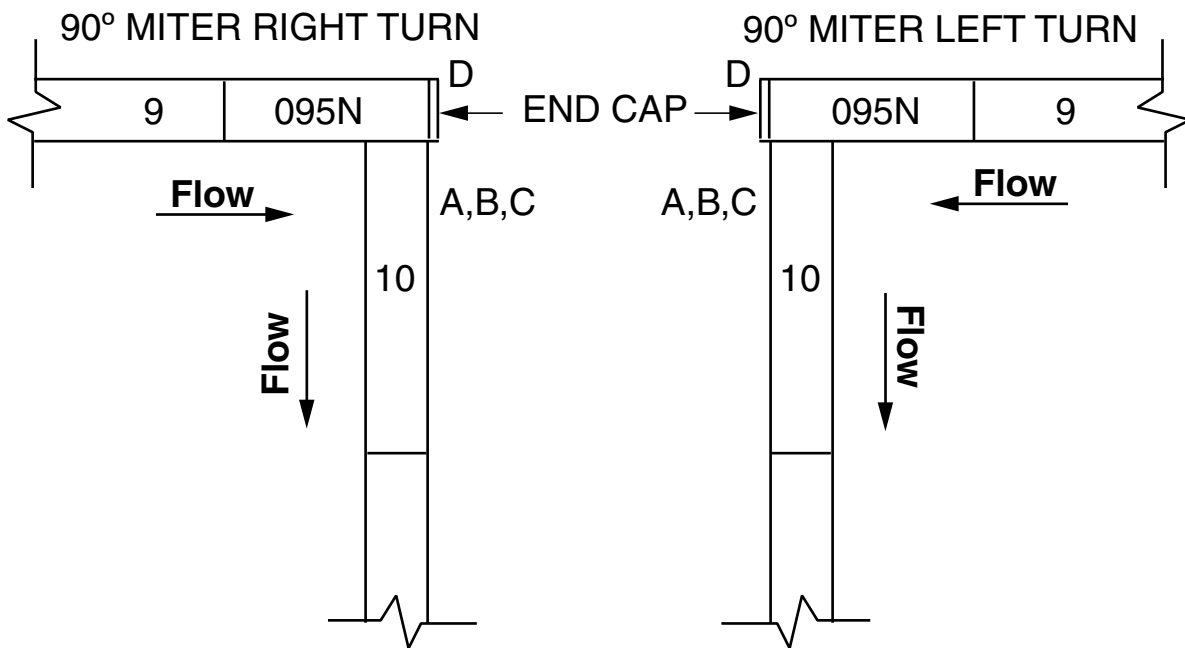


TYPICAL LAYOUTS FOR 095N CHANNEL

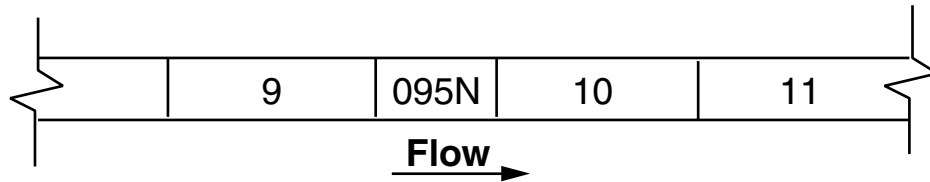

PLAN VIEW SHOWN

90° MITER INSTRUCTION

- A. Remove clips from female end of channel #10.
- B. Drill 4.00 hole in either side of 095N depending on direction of turn.
- C. Attach female end of channel to male connector on side of 095N.
- D. Attach end cap to end of 095N.